



PROFESSIONAL DIGITAL TWO-WAY RADIO

MOTOTRBO™

SL SERIES

SL4000 & SL4010 PORTABLES

QUICK REFERENCE GUIDE

en	fi
de-DE	hu
fr-FR	el
it-IT	tr
es-ES	cs
pt-PT	pl
nl-NL	ro
da	ru
sv	ar





SL4000 Series Portables Quick Reference Guide

Important Safety Information

RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios

ATTENTION!

This radio is restricted to Occupational use only. Before using the radio, read the RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and Regulations.

For a list of Motorola-approved antennas, batteries, and other accessories, visit the following website:

<http://www.motorolasolutions.com/>

Computer Software Copyright

The Motorola products described in this manual may include copyrighted Motorola computer programmes stored in semiconductor memories or other media. Laws in the United States of America and other countries preserve for Motorola Europe and Motorola Solutions Inc. certain exclusive rights for copyrighted computer programmes including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer programme.


Accordingly, any copyrighted Motorola computer programmes contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of the product.

Your Quick Reference Guide

This Quick Reference Guide covers an overview of the SL4000 Series Portable Radios. For more operational details, refer to the User Guide (Motorola Publication Number 68012004075). In a global effort to protect our environment, Motorola will be going green by offering only online copies of the product user guides. These documents can be downloaded from: <https://emeaonline.motorolasolutions.com> Save our trees and energy by saving paper, together we can make the difference.

Check with your dealer or system administrator because your radio will have been customized for your specific needs.

Powering Up and Turning Off the Radio

Press the On/Off power button  on the front keypad.

Adjusting the Volume

To increase the volume, push the Volume Button up.


To decrease the volume, push the Volume Button down.

Radio Controls

Record your radio's programmable button functions in the blanks provided.

SP represents Short Press.

LP represents Long Press.

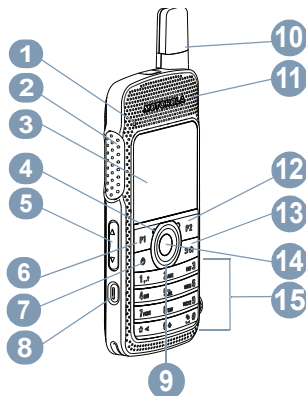

- 1 LED Indicator
- 2 Push-to-Talk (PTT) Button
- 3 Display
- 4 Microphone
- 5 Volume Button
- 6 P1 Button (Programmable)
SP: _____ **LP:** _____
- 7 On/Off Button
- 8 Emergency Button (Programmable)
- 9 4-way Navigation Disc
- 10 Antenna
- 11 Speaker
- 12 P2 Button (Programmable)
SP: _____ **LP:** _____
- 13 Back/Home Button
- 14 Menu/OK Button
- 15 Keypad

LED Indicator

Blinking red – Radio is (1) transmitting at low battery condition, (2) receiving an emergency transmission, (3) has failed the self-test upon powering up, or (4) has moved out of range if radio is configured with Auto-Range Transponder System.*

Rapidly blinking red[†] – Radio is (1) receiving an over-the-air file transfer (Option Board firmware file, Network Frequency file or Option Board Codeplug file), or (2) upgrading to a new Option Board firmware file.

Blinking green and yellow[†] – Radio is (1) receiving a Call Alert, (2) received a text message, or (3) Scan is enabled and is receiving activity.

Solid yellow – Radio is monitoring a digital conventional channel* or in Bluetooth Discoverable Mode. Also indicates fair battery charge when programmable button is pressed.

Blinking yellow* – Radio is (1) scanning for activity*, (2) receiving a Call Alert, (3) all local Linked Capacity Plus channels are busy*, or (4) Scan is enabled and is idle (radio is muted to any activity)[†].

Double blinking yellow – Radio is (1) no longer connected to the repeater while in Capacity Plus or Linked Capacity Plus*, (2) all Capacity Plus channels or Linked Capacity Plus channels are currently busy*, (3) Auto Roaming is enabled*, (4) radio is actively searching for a new site, or (5) indicates radio has yet to respond to a group call alert, or radio is locked*.

Solid green – Radio is powering up or transmitting. Also indicates full charge of the battery when programmable button is pressed.

Blinking green – Radio is powering up, receiving a non-privacy-enabled call or data, detecting activity or retrieving Over-the-Air Programming transmissions over the air.*

Double blinking green – Radio is receiving a privacy-enabled call or data.*

* Not applicable in Connect Plus

[†] Applicable in Connect Plus Only



MOTOROLA

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.
© 2011–2013 Motorola Solutions, Inc. All rights reserved.
November 2013.

www.motorolasolutions.com/slseries



68012004073-D